




QUICK START GUIDE

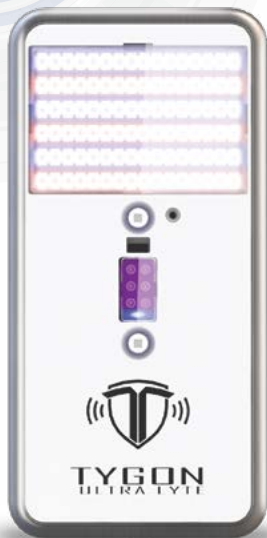

©2022 TYGON™. All rights reserved.

1 What's Inside the Box

TYGON™ ULTRA LYTE



Sanitizing Box




Quick Start Guide



Metal Plates




USB Type-C Cable 



Ring Stand

2 Ultra Lyte Overview | Front

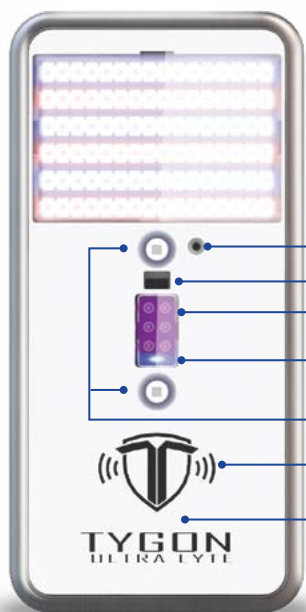

Therapy LEDs

Surface Temperature Sensor

Proximity Sensor

Black Light LEDs

Battery Charge & UV-C Indicator LED


UV-C LEDs

Wireless Charging Receiver

Wireless Charging Transmitter (Backside)

USB Type-C Connector

3 Ultra Lyte Overview | Back

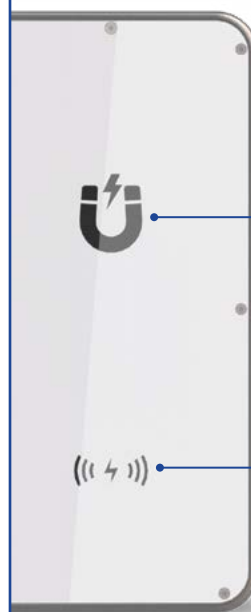

Magnetic Interface

Wireless Transmitter

4 Ultra Lyte Charging | Wired

LED flashes more quickly as the battery charge status increases; solid when complete.



To power source (5v, 1 – 2A)

USB Type-C 
USB 3.1 (10Gbps)

5 Ultra Lyte Charging | *Wireless*

OPTION 1 | Place the Ultra Lyte so its wireless charging receiver on the front is over the charging pad.



Wireless Charging Stand (Not Included)



Wireless Charging Pad (Not Included)

OPTION 2 | Place the wireless charging receiver on the charging stand.

6 Ultra Lyte Tap Functions

One (1) Tap | Dual Function

- ✓ Turn on and activate bluetooth, or
- ✓ Turn off

Two (2) Taps

- ✓ Activates the Black Light (one tap to turn off)

Three (3) Taps

- ✓ Activates UV-C Sanitization (one tap to turn off)

Four (4) Taps


- ✓ To activate the wireless charger of the Ultra Lyte device (must be on a flat surface)

Five (5) Taps

- ✓ Turn off UV-C/Black Light and wireless charging

Tap anywhere


Note: All tap functions may be activated using the TYGON™ App as well, allowing more precise control.

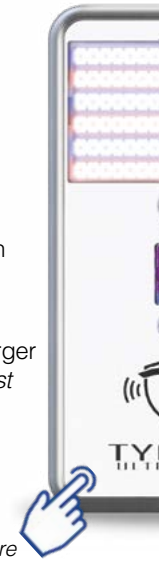

7 Magnetic Smartphone Interface | *Metal Plate*

Optional (but recommended for ease of use)

Note: For smartphones with built-in magnets, i.e., iPhone 12, metal plate not necessary.

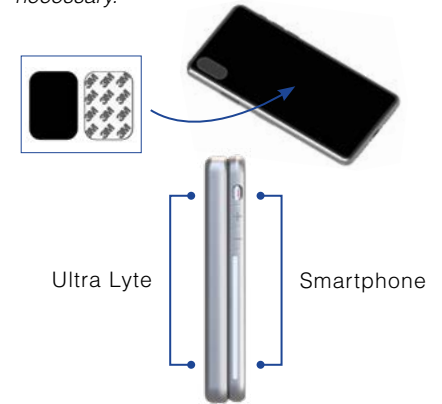

Note: For smartphones with wireless charging, the location will vary. Check your phone's manual. To ensure proper placement of metal plate, avoid the area of the wireless receiver.

8 Magnetic Smartphone Interface | *Ring Stand*

Optional (but recommended)

- ✓ More secure handling.
- ✓ Ring acts as a stand when using to treat Circadian Rhythm.



9 TYGON™ App | *Create An Account*


Step 1

Download the **TYGON™ App** and learn how to use all the functions the Ultra Lyte provides. Scan the QR Code below or search for the **TYGON™ App** on your iOS or Android smartphone.

Step 2

Open the **TYGON™ App**. You will be prompted to sign in. If you do not have an account, click – *Don't have an account* – and follow the prompts to create a new account.

QR Code for TYGON™ APP

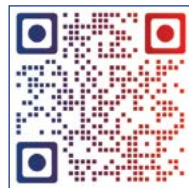

10 TYGON™ App | *Settings*

Sanitization, Black Light and charging functions and protocols.

QR Code for Resource Materials



Please visit our website at:

www.tygonlyte.com

1-949-372-9893

Customer Service Hours

Monday – Friday, 9 am – 5 pm, PST



15333 Culver Drive #340-793
Irvine, CA 92604