


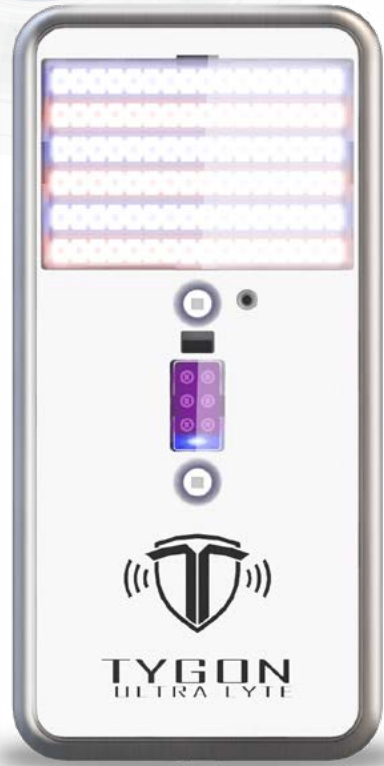

QUICK USE GUIDE



©2022 TYGON™. All rights reserved.

1 What's Inside the Box

Sanitizing Box



Quick Start Guide



TYGON™ ULTRA LYTE



USB Type-C Cable SS 10




Ring Stand



Metal Plates

2 Ultra Lyte Overview | Front

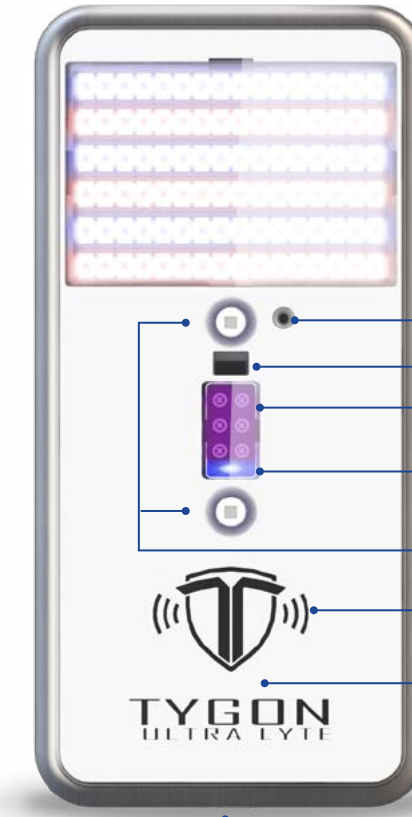

Therapy LEDs

Surface Temp. Sensor

Proximity Sensor

Black Light LEDs

Battery Charge & UV-C Indicator LED


UV-C LEDs

Wireless Charging Receiver

Wireless Charging Transmitter (Backside)

USB Type-C Connector

3 Ultra Lyte Overview | Back

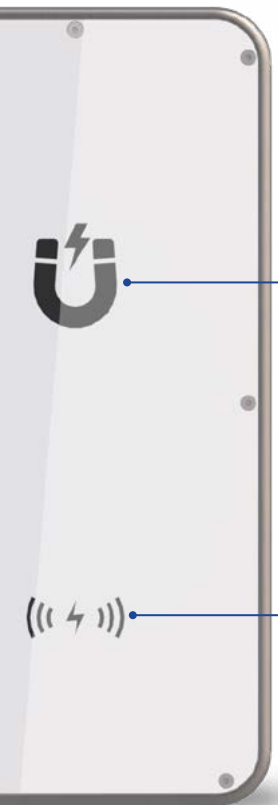

Magnetic Interface

Wireless Transmitter

4a Ultra Lyte Charging | Wired

LED flashes more quickly as the battery charge status increases; solid when complete.



To power source (5v, 1 – 2A)

USB Type-C SS 10
USB 3.1 (TYGON)

4b Ultra Lyte Charging | Wireless

OPTION 1 | Place the Ultra Lyte so its wireless charging receiver on the front is over the charging pad.



Wireless Charging Pad (Not Included)



Wireless Charging Stand (Not Included)

OPTION 2 | Place the wireless charging receiver on the charging stand.

5a Ultra Lyte Tap Functions

One (1) Tap | Dual Function

- ✓ Turn on and activate bluetooth, or
- ✓ Turn off

Two (2) Taps

- ✓ Activates the Black Light (*one tap to turn off*)

Three (3) Taps

- ✓ Activates UV-C Sanitization (*one tap to turn off*)

Four (4) Taps

- ✓ To activate the wireless charger of the Ultra Lyte device (*must be on a flat surface*)

Five (5) Taps

- ✓ Turn off UV-C/Black Light and wireless charging

Tap anywhere



5b One (1) Tap | Bluetooth

Tap Once (1)

Wake the Bluetooth function to communicate with your smartphone.

When bluetooth is communicating, the **Blue** indicator LED will begin **flashing** twice every 3 seconds.

Tap anywhere




Note: All tap functions may be activated using the TYGON™ App as well, allowing more precise control.

5c Two (2) Taps | Smartphone Wireless Charging

- Step 1**
Place the Ultra Lyte on a flat surface facing down.
- Step 2**
Tap the Ultra Lyte Twice (2).
- Step 3**
Place your smartphone so its wireless receiver* is directly over the wireless transmitter of the Ultra Lyte (until the wireless charging symbol – (⚡) – is blinking).

* For smartphones with wireless charging, the location of the wireless receiver will vary. Check your phone's manual to verify location.

Note: Given that the location of the charging receiver in smartphone varies, the magnetic interface may not help with ideal placement during charging.

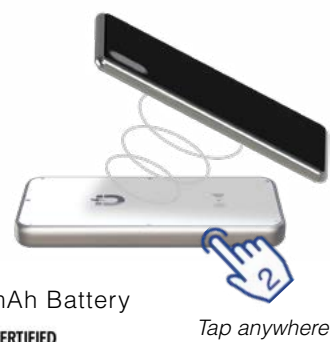

3050 mAh Battery
Qi CERTIFIED
Tap anywhere

5d Three (3) Tap | Sanitization

- Step 1**
Tap three (3) times on the Ultra Lyte.
- Tap anywhere
- Hold two inches (2") from object you are sanitizing.
- Sanitize your phone, pacifier, keyboard and so much more.




Note: As a safety precaution, the UV-C light shuts off automatically if distance exceeds 5".

Prolonged exposure of fabrics, plastics and rubber material to UV-C may lead to degradation. Do not apply UV-C rays for more than 1 minute to any surface.

5e Three (3) Tap | Sanitization Box

- Step 1**
Place item in box.
- Add personal items such as earrings, pacifier, or hearing aids.
- Step 2**
Place Ultra Lyte with the UV-C LEDs facing down.
- Step 3**
Activation: Tap three (3) times on the Ultra Lyte (you can also use the app for more precise timing).
- Step 4**
Sanitize for 30 seconds.

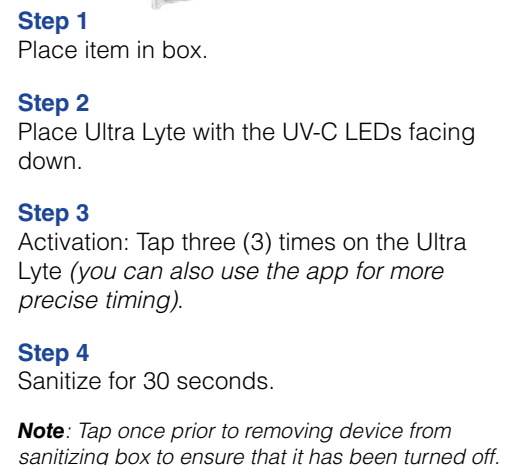

Note: Tap once prior to removing device from sanitizing box to ensure that it has been turned off.

5f Four (4) Tap | Black Light

- Step 1**
Place item in box.
- Step 2**
Place Ultra Lyte with the UV-C LEDs facing down.
- Step 3**
Activation: Tap three (3) times on the Ultra Lyte (you can also use the app for more precise timing).
- Step 4**
Sanitize for 30 seconds.
- Note:** As a safety precaution, the black light shuts off automatically if distance exceeds 5".
- For ideal visualization, use low light or in dark.




Note: As a safety precaution, the black light shuts off automatically if distance exceeds 5".

For ideal visualization, use low light or in dark.

6 Magnetic Smartphone Interface | Metal Plate

- Optional (but recommended for ease of use)**
- Note:** For smartphones with built-in magnets, i.e., iPhone 12, metal plate not necessary.
- Ultra Lyte
- Smartphone
- Note:** For smartphones with wireless charging, the location will vary. Check your phone's manual. To ensure proper placement of metal plate, avoid the area of the wireless receiver.

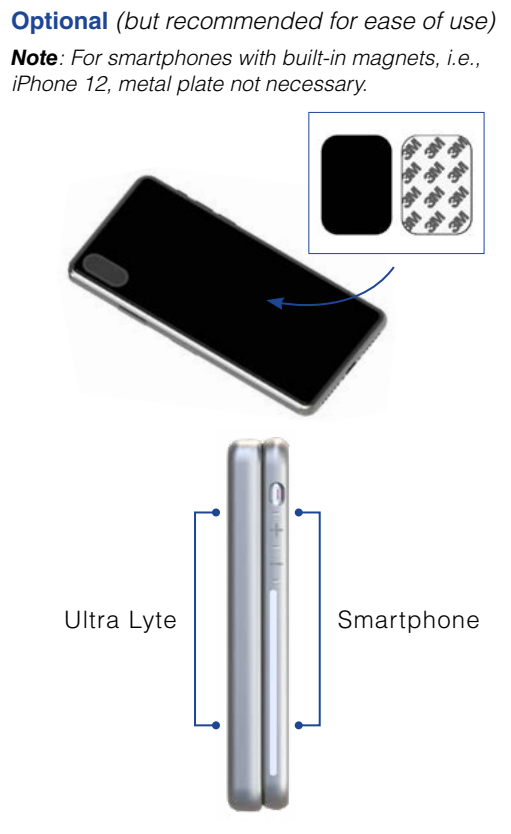



7 Magnetic Smartphone Interface | Ring Stand

- Optional (but recommended)**
- More secure handling.
 - Ring acts as a stand when using to treat Circadian Rhythm.




8a TYGON™ App | Create An Account

- Step 1**
Download the **TYGON™ App** and learn how to use all the functions the Ultra Lyte provides. Scan the QR Code below or search for the **TYGON™ App** on your iOS or Android smartphone.
- Step 2**
Open the **TYGON™ App**. You will be prompted to sign in. If you do not have an account, click – *Don't have an account* – and follow the prompts to create a new account.

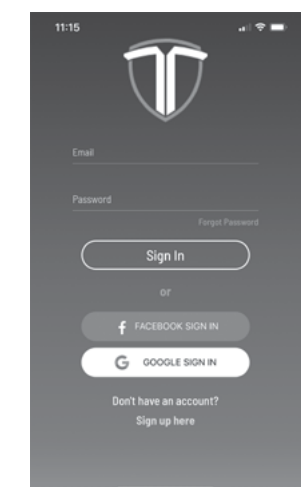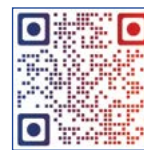


8b TYGON™ App | Settings

- Step 1**
Tap on the setting icon (top right).
- Light Therapy Protocols
- By Anatomical Location
 - By Condition
 - Manual Control

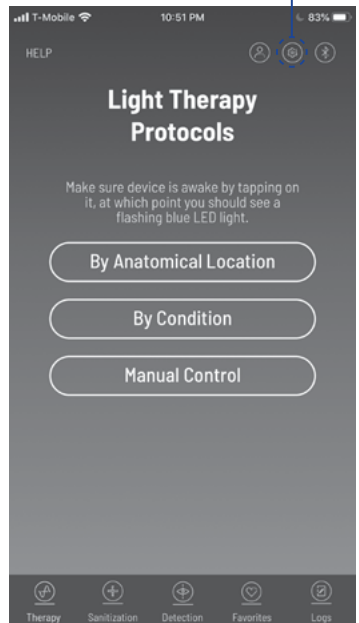

8c TYGON™ App | Settings (cont.)

- Profile Bluetooth Charging
- Settings Battery
- 49%
- Connection & Battery
- Connection Status: Connected
 - Auto-Connect: [Toggle]
 - Enable Wireless Charging: [Toggle]
- Wireless Charging Toggle
- Bluetooth Auto-Connect Toggle
- Bluetooth Connection Status

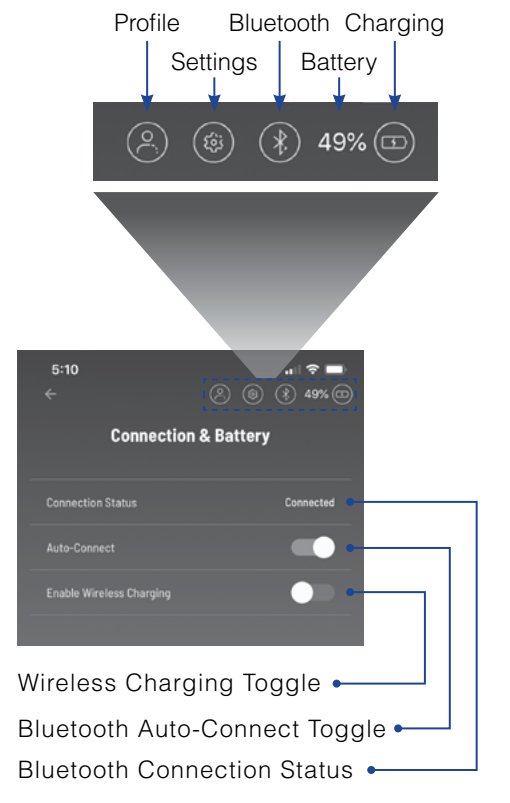

8d TYGON™ App | Settings (cont.)

- Refer to the ULTRA LYTE Manual for a complete review of all the Light Therapy, Sanitization, Black Light and charging functions and protocols.
- QR Code for Resource Materials



9 Technical Specifications

- Operating Temperature:** 0°C to 40°C (32°F to 104°F)
- Storage Temperature:** -15°C to 85°C (5°F to 185°F)
- Battery:** 3.85V, 3050mAh LiPo
- Input Power:** 2.7-5.5V
- Output Power:** 35W
- 5V Qi-certified wireless charger (A5, A11, A12 and A16)
- FCC approved low power 5.0 Bluetooth module at 2.4GHz (-4dBm output)

- Please visit our website at:
www.tygonlyte.com
1-949-372-9893
- Customer Service Hours**
Monday – Friday, 9 am – 5 pm, PST
- TYGON™**
ULTRA LYTE
- 15333 Culver Drive #340-793
Irvine, CA 92604

